


IS-460 - Loading Rates

The following conditions must be met before loading rates:


- The customer must have a rate protection contract.
- The machine must be declared.

Loading Rates

1. Turn the IS-460 off by switching the ON/OFF button to the OFF position.
2. Disconnect the power cord plug from the wall outlet, wait 10 seconds, then re-insert the power cord plug into the wall outlet.
3. Turn the IS-460 on by switching the ON/OFF button to the ON position.
4. From the Homescreen, press the **MENU** button.

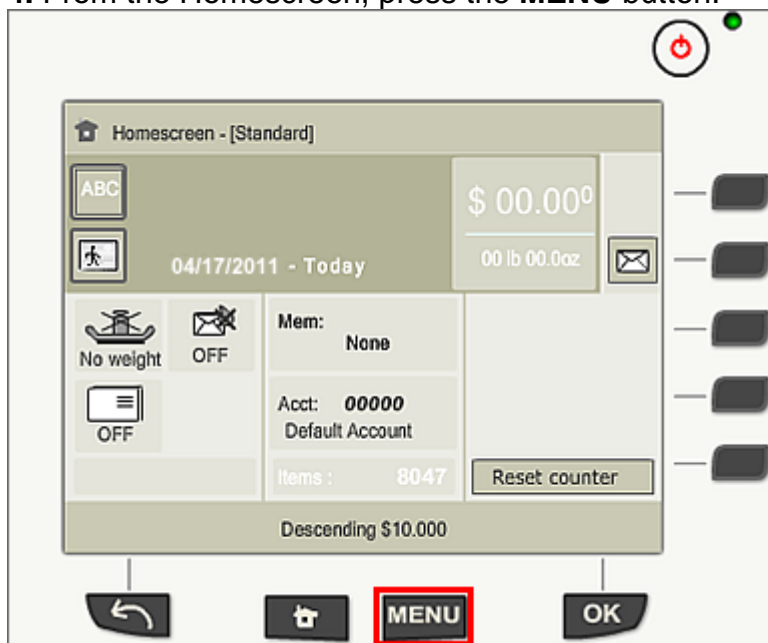

5. From the Main Menu, press the **Next items** button.

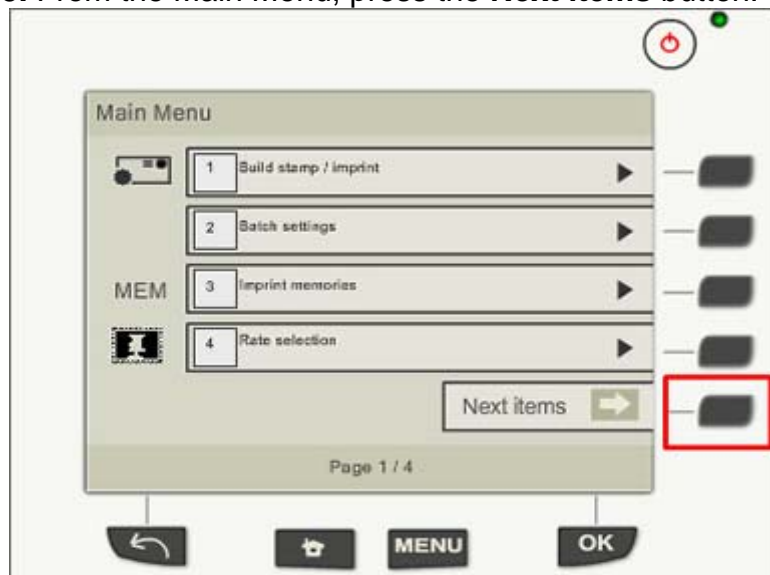


© 2011 Neopost USA Inc. All rights reserved. No part of this document may be reproduced or distributed in any form or by any means without the express written permission of an authorized representative of Neopost USA. This document and all information contained herein are confidential and may only be disclosed as necessary to support customer use of the equipment.


Limitations of this Document

The information presented herein is subject to change. Neopost USA Inc. ASSUMES NO LIABILITY WHATSOEVER FOR ANY LOSSES OR DAMAGES RESULTING FROM THE USE OF THIS INFORMATION.


6. Press the **Next items** button to access the next page of options.

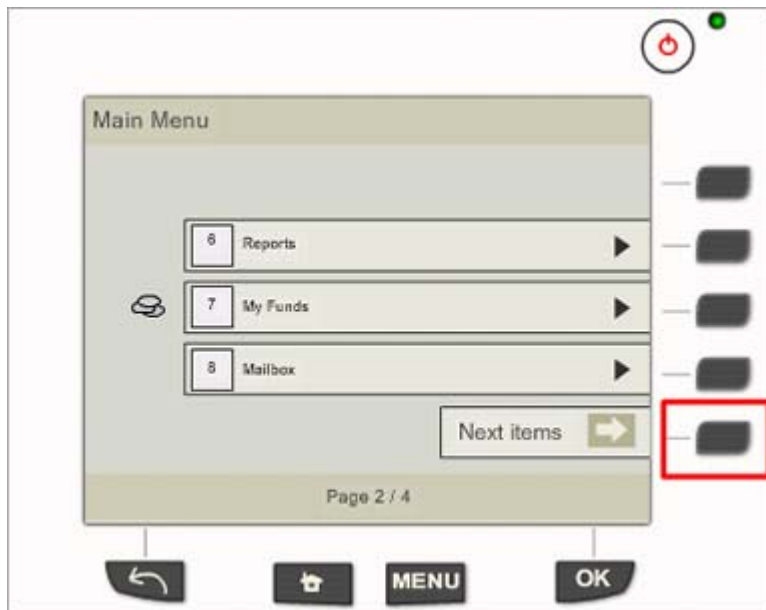

7. Press the **Next items** button to access the next page of options.

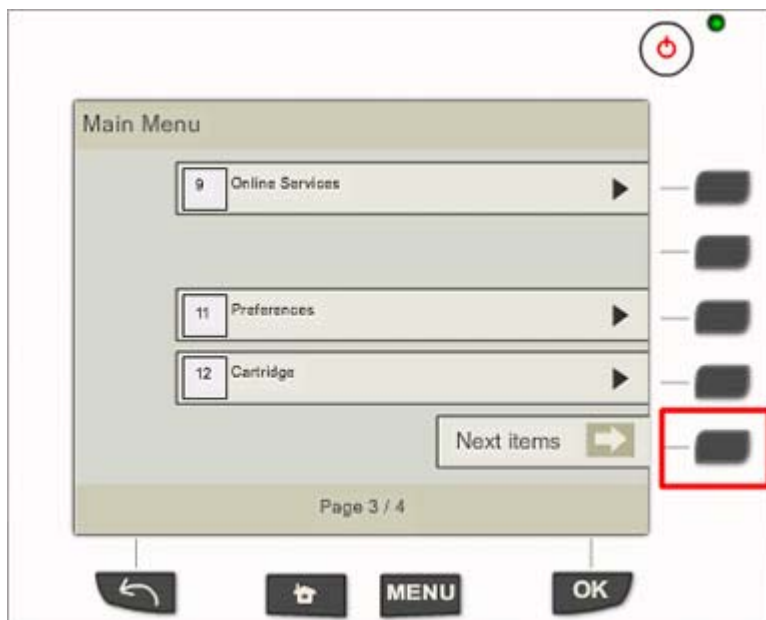


8. Press the **Supervisor** button.

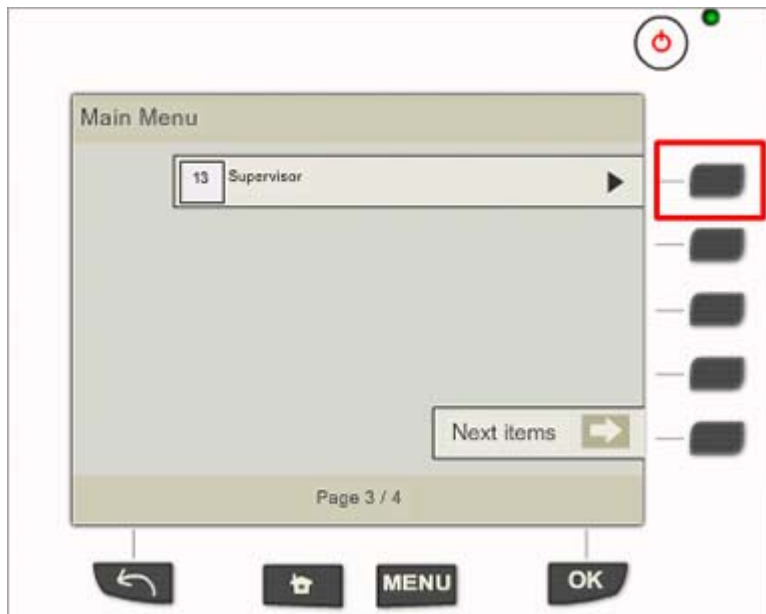


9. Using the numeric keypad, enter the Supervisor PIN code, **09430**.
- Press the **OK** button.



10. From the Supervisor Main Menu, press the **Next items** button to access the next page of options.

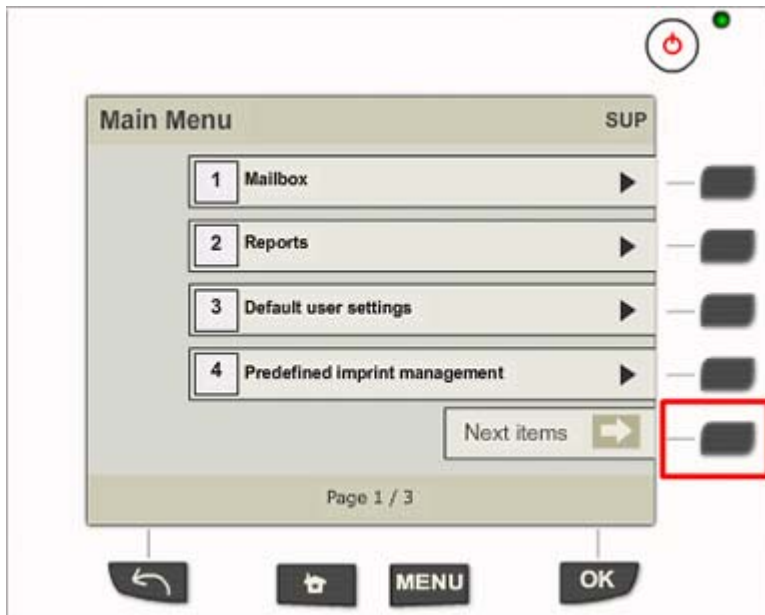

11. Press the **Options and Updates** button.

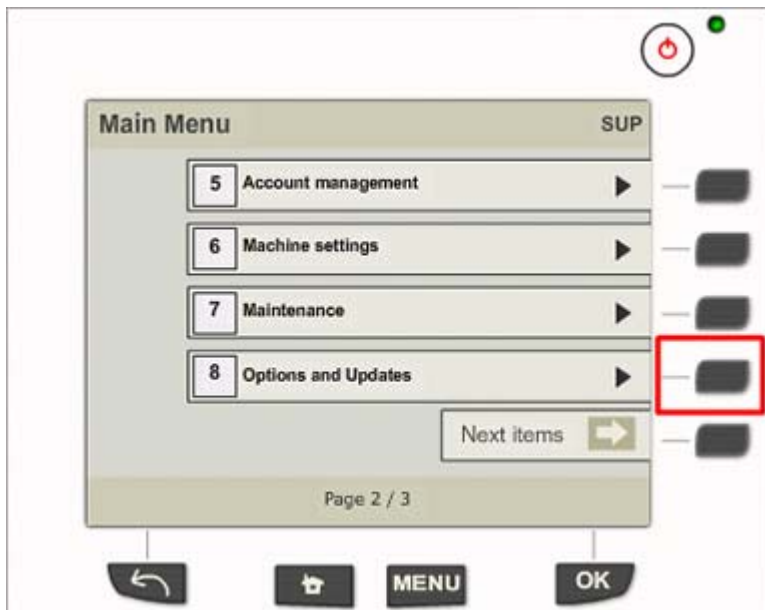


12. Press the **Rate Management** button.




13. Press the **Check for Updates** button.


- The rate to be loaded, **USPS - RTL - 04/17/2011**, will have a check mark next to it.

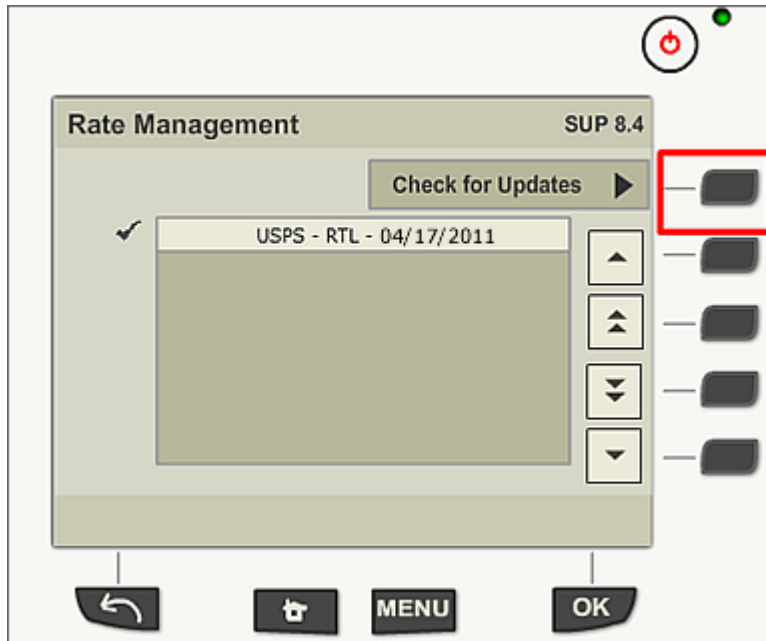


14. The machine is preparing for the Generic call.
- Do not interrupt this process.

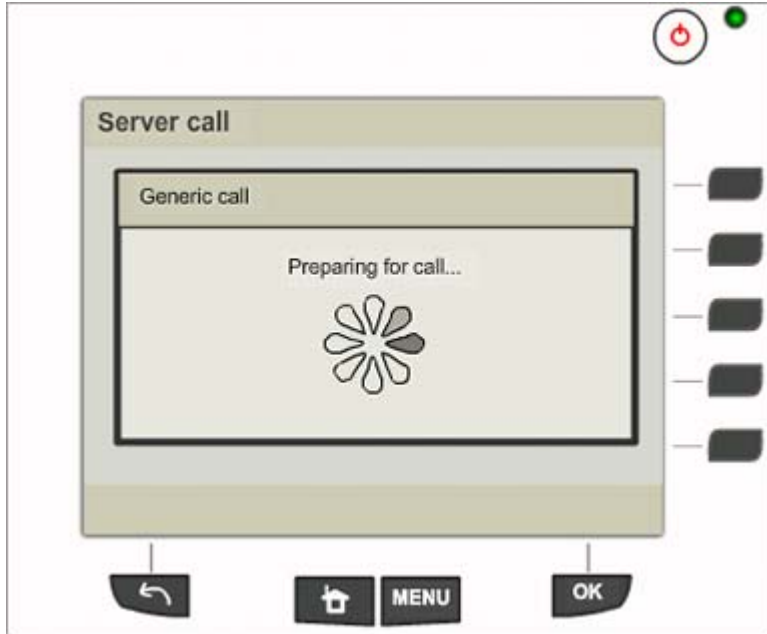


15. The machine is connecting to the server.
- Do not interrupt this process.

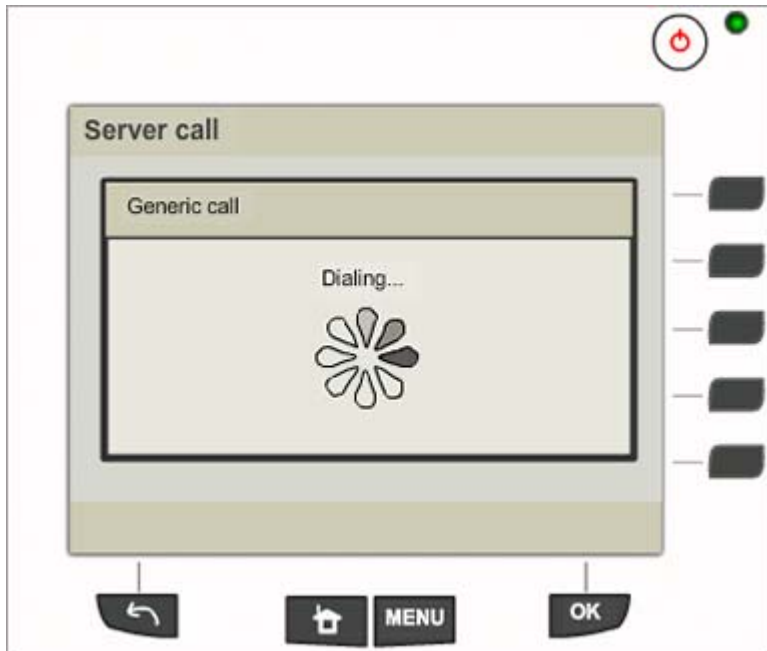


16. The transaction is in progress.
- Do not interrupt this process.

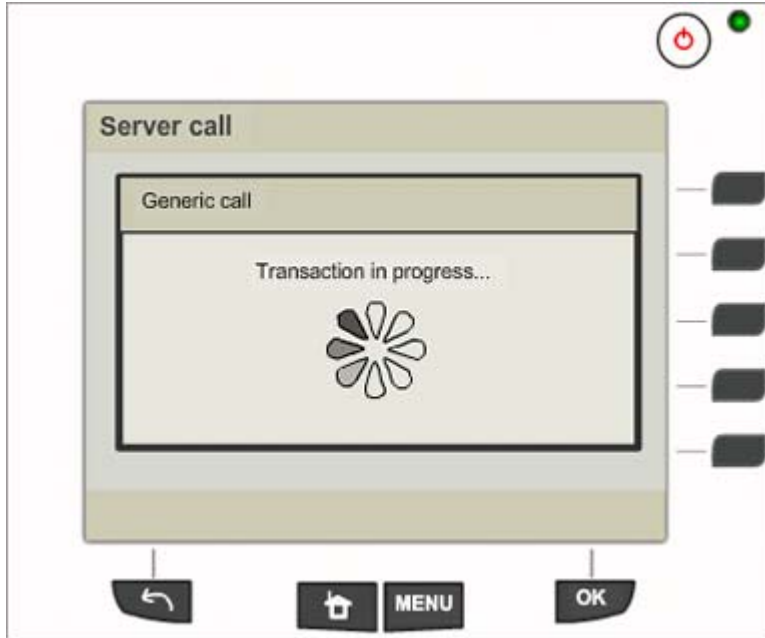

17. The Generic Call finished and the rates loaded successfully.
- Press the **OK** button.

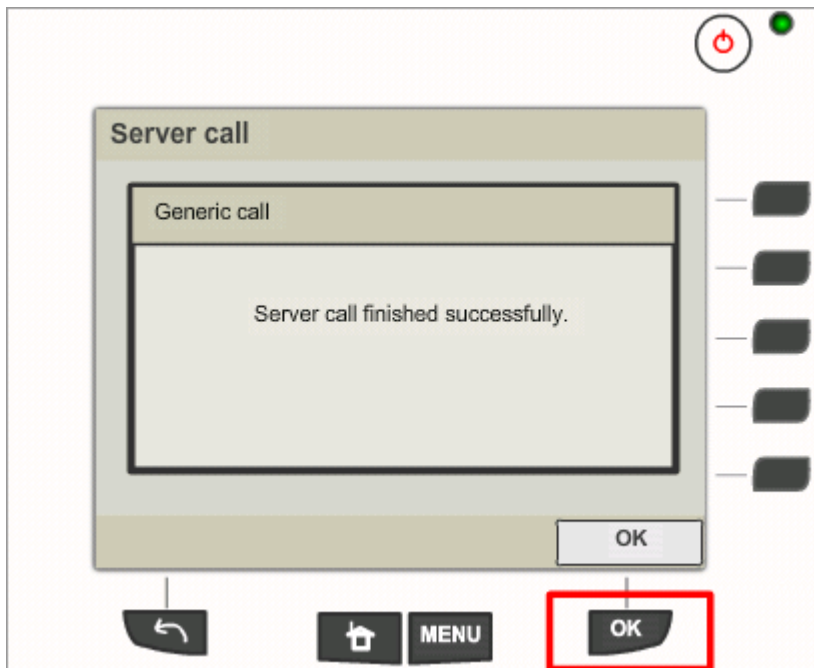

18. The current rates are indicated by the check mark.
- The new rates, **USPS – RTL – 04/17/2011**, will become active on the effective date.
 - Press the **OK** button.

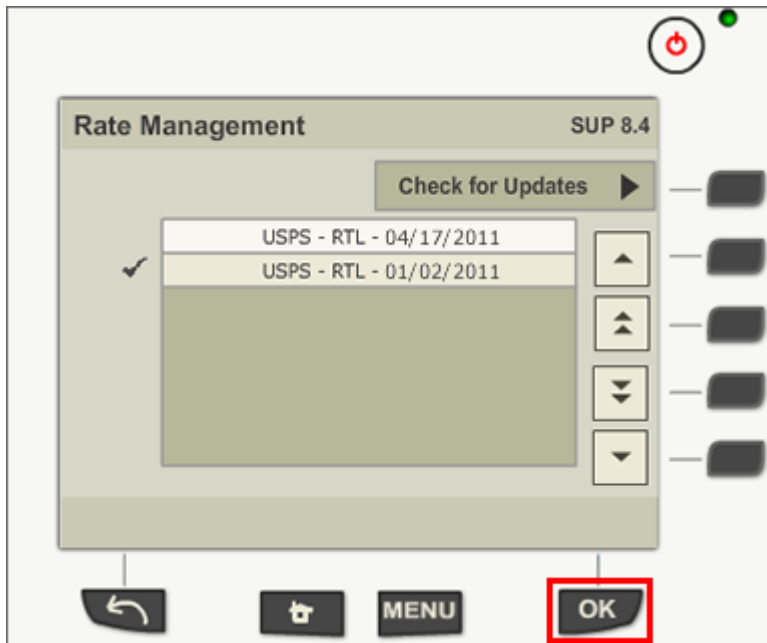

19. Press the **SLEEP / WAKE** button to exit Supervisor mode.

